
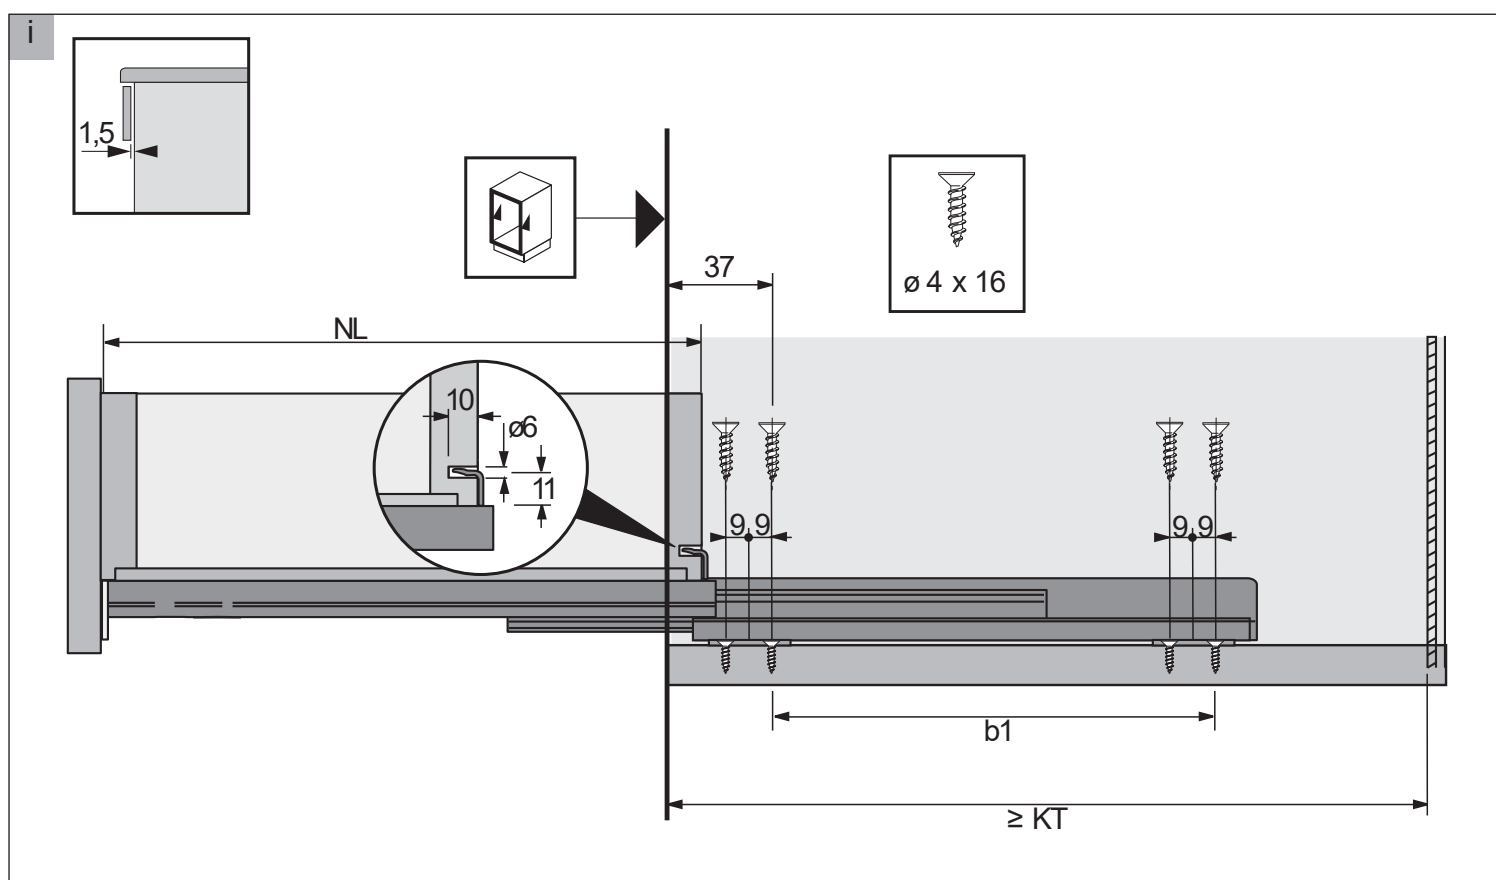


Quadro V6

Bodenmontage/ Bottom panel installation

Technik für Möbel

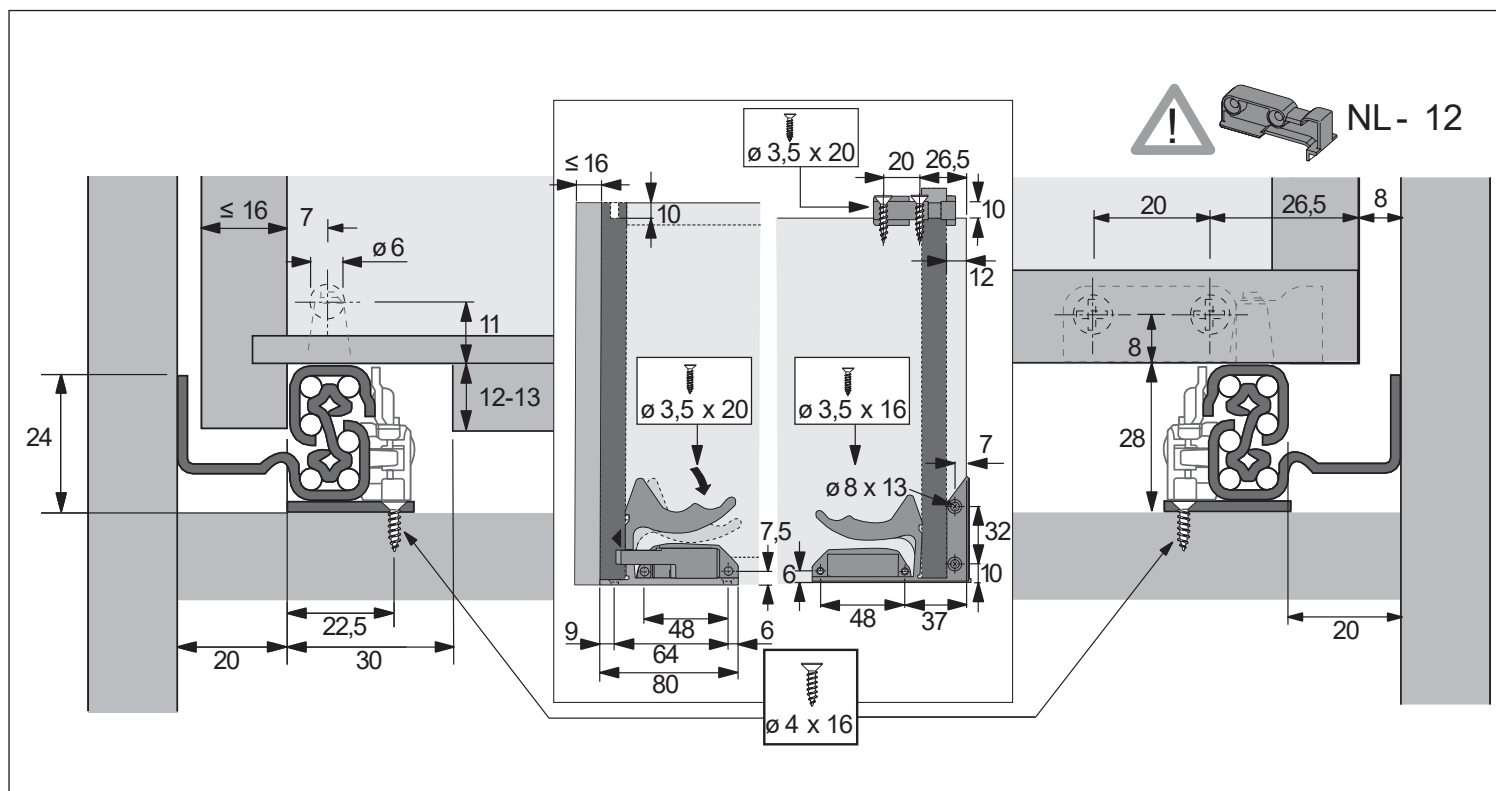

NL mm	$\geq$ KT mm	b1 mm
350	363	256
400	413	288
450	463	256
500	513	256

